


PARTS LIST

SLIDER ACCESSORIES AND AXLE COMPONENTS

LIT NO: L1102

DATE: January 2025


REVISION: G

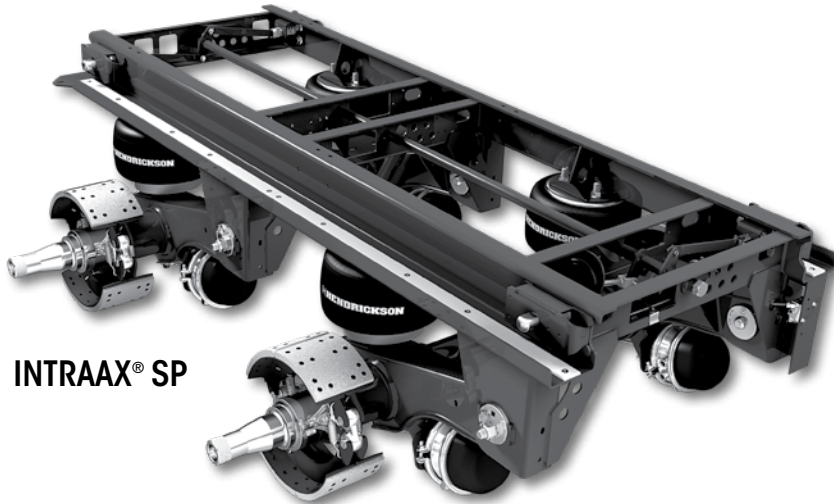

INTRAAX® SP








VANTRAAX®

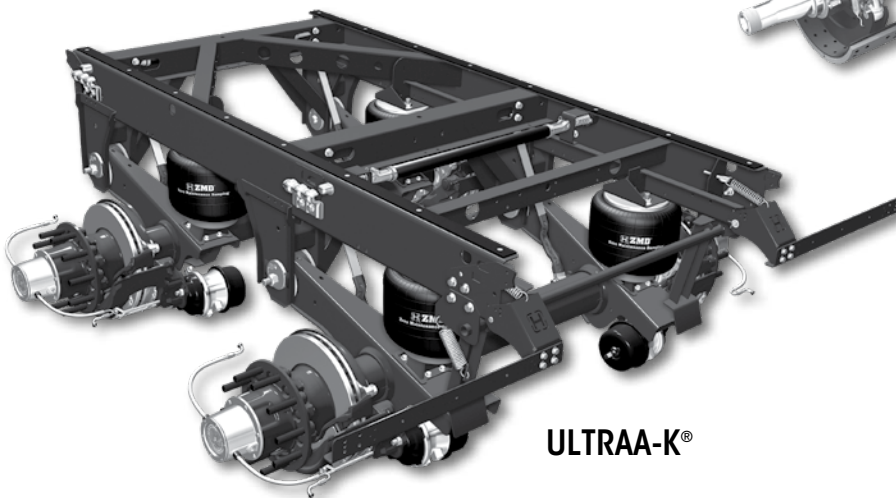

ULTRAAX-K®

SLIDER ACCESSORIES AND AXLE COMPONENTS

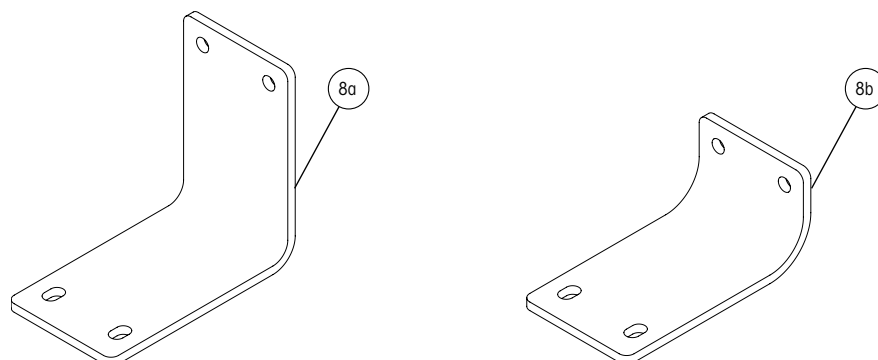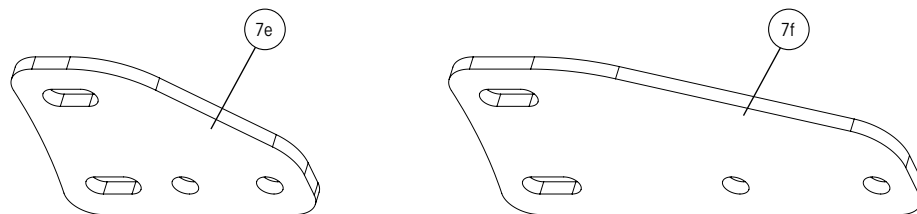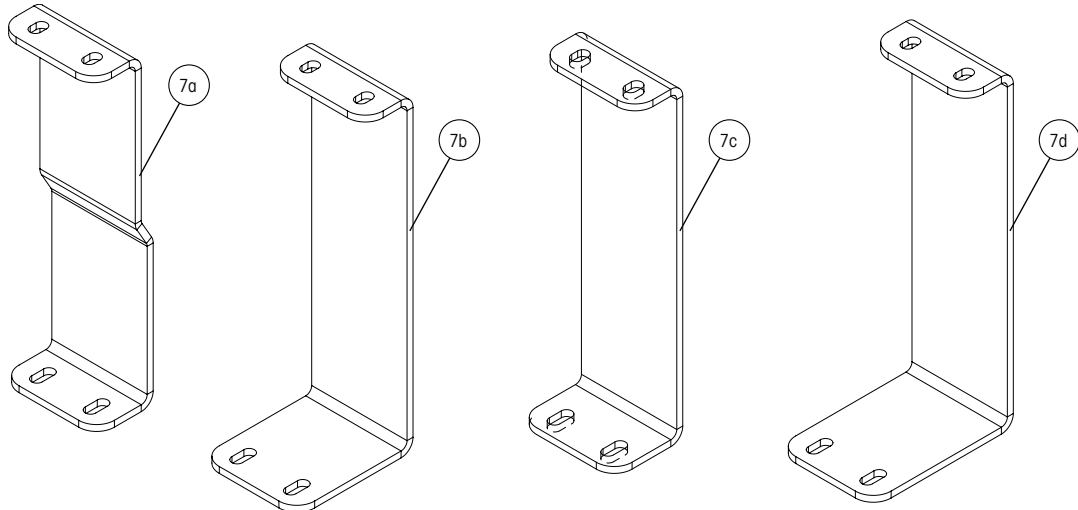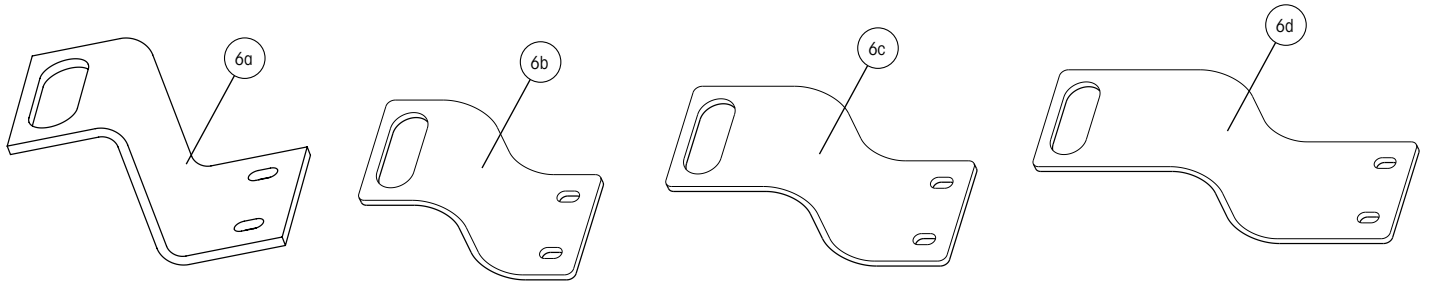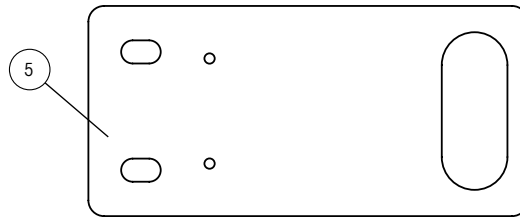

SLIDER ACCESSORIES AND AXLE COMPONENTS

SLIDER ACCESSORIES

ITEM	DESCRIPTION	PART NO.	SYSTEM QTY.	NOTES
1	MANUAL STOP BAR			
	42" box with 1.375" diameter pins	S-14231-2	1	For 6" center-to-center hole spacing
	48" box with 1.375" diameter pins	S-14231-8	1	For 6" center-to-center hole spacing
	54" box with 1.375" diameter pins	S-14231-4	1	For 6" center-to-center hole spacing
	42" box with 1.625" diameter pins	S-21477-2	1	For 4" center-to-center hole spacing
	48" box with 1.625" diameter pins	S-21477-8	1	For 4" center-to-center hole spacing
	54" box with 1.625" diameter pins	S-21477-4	1	For 4" center-to-center hole spacing
2	STINGER			
	2a 32" length; (VANTRAAX® & ULTRAA-K®)	S-24008-3	1	Includes stinger, air line bracket, screws and nuts
	2b 36" length; (VANTRAAX® & ULTRAA-K®)	S-24008-4	1	Includes stinger, air line bracket, screws and nuts
	2c 24" length; (VANTRAAX® & ULTRAA-K®)	S-27028-1	1	Includes stinger, air line bracket, screws and nuts
3	MUD FLAP BRACKET			Includes (1) bracket, bolts and lock-nut
	42" box	S-22428-2	1	
	48" and 54" box	S-22428-8	1	
4	SLIDER WEAR PAD KIT			
	HS Slider (Legacy Product)	S-14342-1	2	Includes (1) slider wear pad, (8) nuts and (8) screws
	Single Axle VANTRAAX (HKANT 23K & HKANL 23K)	S-28824	2	Includes (1) slider wear pad, (5) screws
	K2® Tandem Sliders (HTHKA, VANTRAAX and ULTRAA-K)	S-14342-3	2	Includes (1) slider wear pad, (8) nuts and (8) screws
	Tandem Axle VANTRAAX with 121" Axle Spacing	S-27566	6	Includes (1) slider wear pad and (4) screws
	Tridem Axle VANTRAAX with 49" Axle Spacing	S-27566	6	Includes (1) slider wear pad and (4) screws
	Tridem Axle VANTRAAX with 60" Axle Spacing	S-29204-60	2	Includes (3) slider wear pads, (12) nuts and (12) screws
	Tridem Axle VANTRAAX with 72" Axle Spacing	S-29204-72	2	Includes (3) slider wear pads, (16) nuts and (16) screws
	INTRAAX SP AAZNT (Single, Tridem and Tandem)	S-28640		Includes (2) wear pads, (10) nuts and (10) screws. Quantity of (1) needed for single; (2) for tandem; and (3) needed for tridem. Includes (2) 49" pads and (10) screws.
	INTRAAX SP AAZL (Single and Tandem)	S-28641		Includes (2) wear pads and (10) screws. Quantity of (1) needed for single; (2) for tandem; and (3) needed for tridem. Includes (2) 49" pads and (10) screws.
5	VANTRAAX® Weld-on Flat Air Tank Bracket			
	48" and 54" box	C-26921	2	Includes (1) bracket
6	VANTRAAX® Weld-on "Z" Air Tank Bracket			Includes (1) bracket
	6a 42" box	B-27131	2	HKAT 50K and HTHKA models only
	6b 42" box	D-35754-1	2	
	6c 48" box	D-35754-2	2	
	6d 54" box	D-35754-3	2	

SLIDER ACCESSORIES AND AXLE COMPONENTS

SLIDER ACCESSORIES

ITEM	DESCRIPTION	PART NO.	QTY. PER AXLE	NOTES
7	INTRAAX® SP AIR TANK BRACKET KIT			
	7a 37" & 38" I-Beam Centers	S-27011-1	1	AAZNT Models with large air tank only; Includes 2 brackets, 4 screws and 4 nuts
	7b 43" & 44" I-Beam Centers	S-27011-2	1	AAZNT Models with large air tank only; Includes 2 brackets, 4 screws and 4 nuts
	7c 37" & 38" I-Beam Centers	S-27011-3	1	AAZNT Models with small air tank only; Includes 2 brackets, 4 screws and 4 nuts
	7d 43" & 44" I-Beam Centers	S-27011-4	1	AAZNT Models with small air tank only; Includes 2 brackets, 4 screws and 4 nuts
	7e 37" & 38" I-Beam Centers	S-27742-1	1	AAZL models with large or small air tank; Includes 2 brackets, 4 screws and 4 nuts
	7f 43" & 44" I-Beam Centers	S-27742-2	1	AAZL models with large or small air tank; Includes 2 brackets, 4 screws and 4 nuts
8	ULTRAA-K® AIR TANK BRACKET KIT			
	8a Standard	S-34883/2	2	Includes (1) bracket, (2) screws and (2) nuts
	8b Optional	S-34884/2	2	Includes (1) bracket, (2) screws and (2) nuts

AXLE COMPONENTS

1	AXLE NUT KIT			
	HN Spindle	S-20492/2	2	Includes inner axle nut, outer axle nut, lock washer and set screw
	HP Spindle	S-20475/2	2	Includes inner axle nut, outer axle nut, lock washer and set screw
	STEMCO PRO-TORQ (HN)	A-23851	2	1-piece spindle nut
	STEMCO PRO-TORQ (HP)	A-23852	2	1-piece spindle nut
	PRECISION320®	S-29286/2	2	Includes button head cap screws, interlock washer, spindle nut
	PRECISION240®	S-33332/2	2	Includes button head cap screws, interlock washer, spindle nut
2	AXLE FILTER KIT			
	HN Spindle	S-24963	1	Includes (2) end plugs and (2) filters
	HP and P90 Spindles	S-24960	1	Includes (2) end plugs and (2) filters
3	ABS WELD-ON BRACKET KIT			HN, HP and HUS spindles
	5" Axle	S-27117	2	
	LDA™ (5.75") Axle	S-28757	2	

Actual product performance may vary depending upon vehicle configuration, operation, service and other factors.

All applications must comply with applicable Hendrickson specifications and must be approved by the respective vehicle manufacturer with the vehicle in its original, as-built configuration. Contact Hendrickson for additional details regarding specifications, applications, capacities, and operation, service and maintenance instructions.

Call Hendrickson at 330.489.0045 or 866.RIDEAIR (743.3247) for additional information.



www.hendrickson-intl.com

TRAILER COMMERCIAL VEHICLE SYSTEMS
2070 Industrial Place SE
Canton, OH 44707-2641 USA
866.RIDEAIR (743.3247)
Fax 800.696.4416

Hendrickson Canada ULC
2825 Argentia Road, Unit #1 - 4
Mississauga, ON Canada L5N 8G6
800.668.5360
905.789.1030 • Fax 905.812.9423

Hendrickson Mexicana
Circuito El Marqués Sur #29
Parque Industrial El Marqués
Pob. El Colorado, Municipio El Marqués,
Querétaro, México C.P. 76246
+52 (442) 296.3600 • Fax +52 (442) 296.3601

L1102 Rev G 01-25

© 2021 - 2025 Hendrickson USA, L.L.C. All Rights Reserved. All trademarks shown are owned by Hendrickson USA, L.L.C., or one of its affiliates, in one or more countries.

Information contained in this literature was accurate at the time of publication. Product changes may have been made after the copyright date that are not reflected.

Printed in United States of America